
# Pre-Fab Sauna with Tylo Pure or Elite Control - Mounted Inside

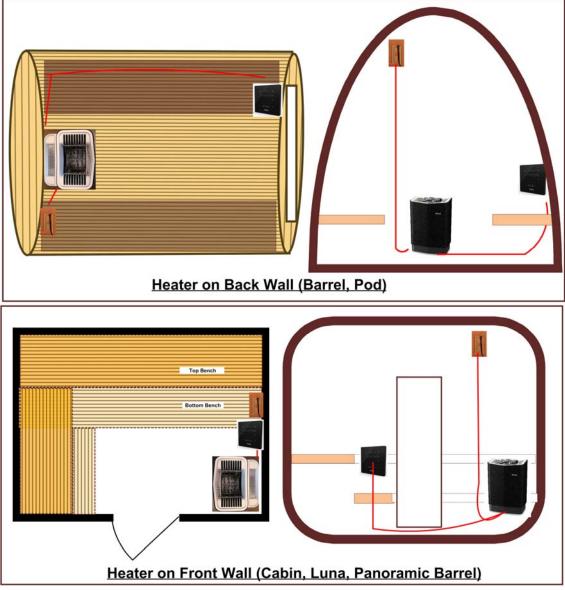

### Prefab sauna with TYLO Plus or Combi

Control is mounted inside sauna. Control must be mountedat least 1' from heater and no more than 3' above floor.

Mount sensor 1" from ceiling, 3"-4" away from heater (preferably not in corner).

#### Heater on Back Wall (Barrel, Pod)

Control: Run cable under bench up through bench gap to 3' above floor. Mount control above bench on back or front wall. (3' above floor).

#### Heater on Front Wall (Cabin, Luna, Panoramic barrel)

Control: Run cable under door to front wall or on side wall (1- min. away from heater). (Maximum 3' above floor)

<u>Sensor</u>:

Sensor wire up goes high on wall next to heater- 1" down from ceiling (not in the corner). Surface install sensor as shown in heater QSG (quick start guide)

Trim: Cedar trim provided. Cut to size as and use as desired

# Example of Tylo Control Inside Installation




(4)




# Example of Tylo Sensor Location & Trim





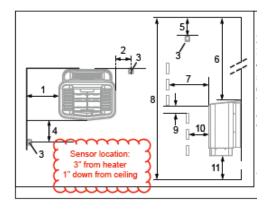

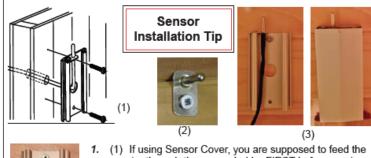

(1) If using sensor cover, you are supposed to read the sensor wire through the sensor holder FIRST before running wire inside the wall. If not done first, do one of the following:
(2) Sensor with metal tab is usually installed without cover with one screw through the sensor tab directly to the finished wall.

3. (3) Mount sensor holder close to sensor. Surface mount sensor as show in picture. Install cover to hide sensor wire and any hole made for wire.

**4.** (4) <u>DO NOT</u> install cover on top of sensor after installation. It can affect heat sensitivity and cause heater high limit to trip.