

Sense Tylo Temperature High Limit Reset

Tylo High Temperature limit is thermo-disc part inside heater. There is white plastic stem (plunger) that extends from limit switch to opening in left side of heater frame (next to rating label).

If high limit “trips”, the metal clip pops out and pushes white stem out from heater frame. Pressing white stem will push clip back in.

When tripped heater will not produce heat. If it is Plus or Combi with Pure or Elite control, control will go blank



Limit is on left side of junction box
When tripped, stem is pushed out.

